

Scoreboard/Pitch Count Set up and Operations

- #1. Make sure **both** remotes are turned **off** and then turn on the power to the scoreboard by flipping switch located on concession stand wall to the on position.
- #2. Both scoreboard and pitch count board should be powered. Turn the power on on the pitch count remote (the larger remote pictured below in figure 1). The lcd screen will go through a search sequence and then should read “Select Network Baseball.” Press the enter button one time and the remote is now ready to use.
- #3. Press PC+1 on the Home Score or Guest Score side to add to the pitch count for the appropriate side. Press the PC-1 to remove a pitch if correction needs to be made. Press and hold the PC Reset button for 5 seconds on appropriate side to clear pitch count for a player/team.

*Figure 1
Pitch Count Remote*



- #4. Now turn the power on to the scoreboard remote by flipping power switch to the on position. Scoreboard should flash “11.” Press the “Baseball” button on the top right hand corner of remote. Scoreboard should stop flashing and remote is now ready to use. If score/innings are not reset to zero, press and hold the “New Game” button to reset board.

*Figure 2
Scoreboard Remote*



Always make sure boards and remotes are turned on in this order. If scoreboard remote gets turned on before pitch count remote is connected, STOP, power down everything including scoreboards and start over.

Pitch Count remote will work without being plugged in, but if possible, plug it in to the outlet behind home plate on D1. Scoreboard remote works on AA batteries which extras should be located in scoreboard remote bag in concession stand.

